


BRIGGS & STRATTON

®

3500 WATT

Model 030218

Illustrated Parts List

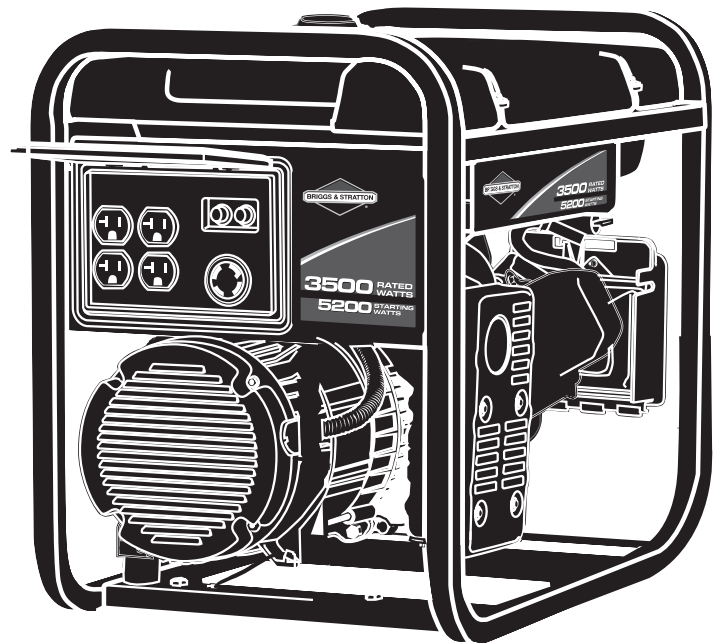

Questions?

Help is just a moment away!

Find your Briggs and Stratton distributor in our distributor locator map at www.briggsandstratton.com or contact your local Briggs and Stratton dealer for further information.

Perguntas?

O auxílio está a poucos passos!

Procure o fornecedor de serviços autorizados mais próximo em nosso mapa de fornecedores em www.briggsandstratton.com ou entre em contato com seu representante local da Briggs & Stratton para obter mais informações.

Preguntas?

La ayuda es justa un momento lejos!


Encuentre su Briggs y Stratton distribuidor en nuestro mapa del localizador de distribuidor en www.briggsandstratton.com o avise su Briggs y Stratton el comerciante local para la información adicional.

BRIGGS & STRATTON POWER PRODUCTS GROUP, LLC
JEFFERSON, WISCONSIN, U.S.A.


Manual No. 196382A
Revision 0 (04/20/2005)




3500 Watt Portable Generator

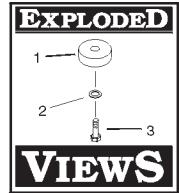

EXPLODED VIEW - MAIN UNIT

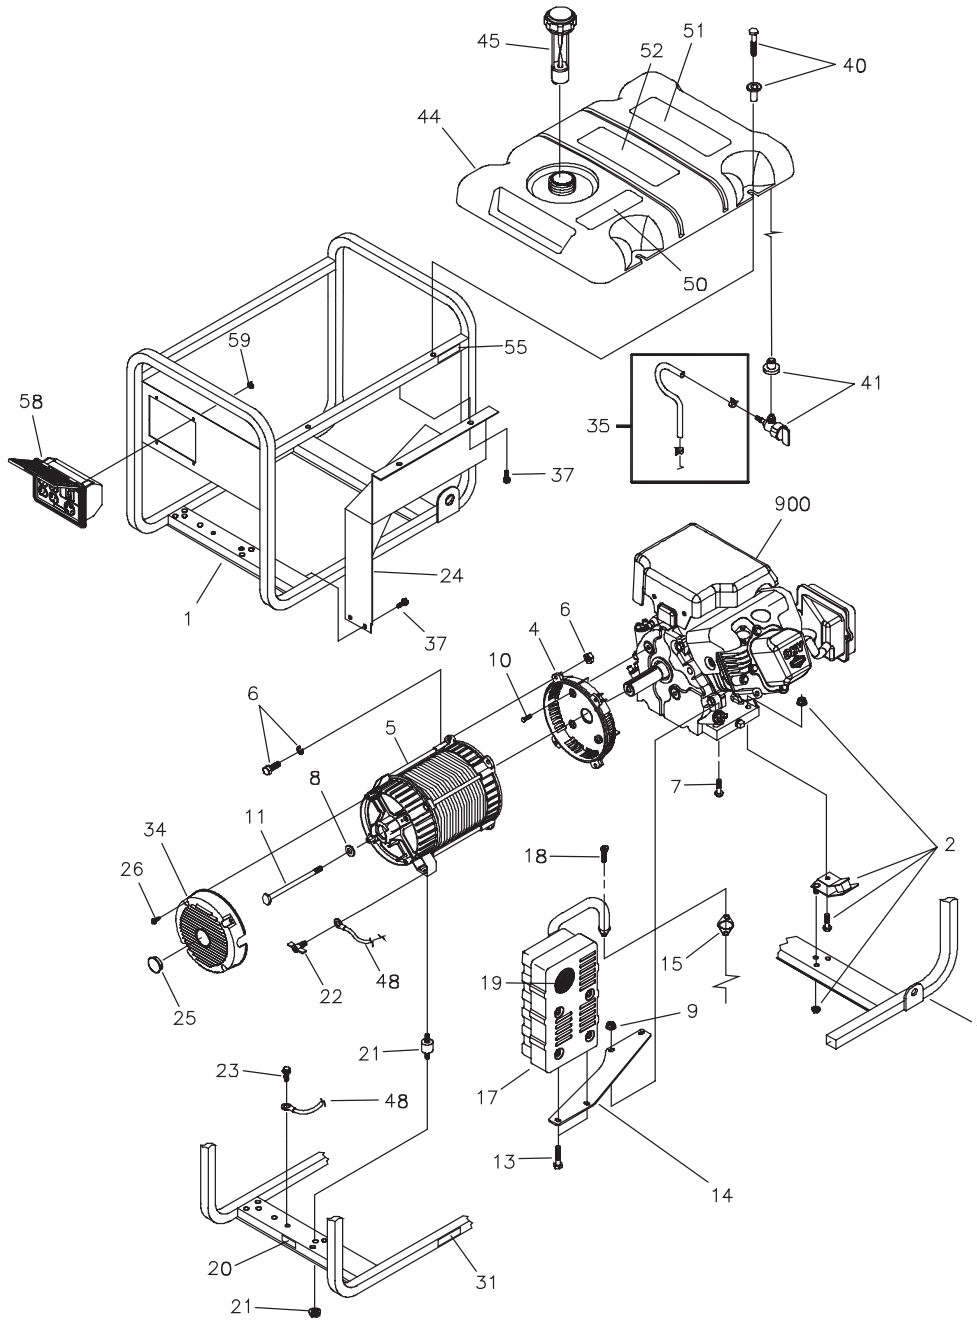

Copyright © 2005 Briggs & Stratton Power Products Group, LLC. All rights reserved. No part of this material may be reproduced or transmitted in any form by any means without the express written permission of Briggs & Stratton Power Products Group, LLC.

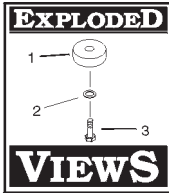

EXPLODED VIEW - PARTS LIST


Item	Part #	Description
1	M194779GS	CRADLE
2	197564GS	MOUNT,Vibration
4	186058AGS	HOUSING, Engine Adapter
5	NSP	ASSY,Alternator (see page 4)
6	194151GS	KIT, Hardware Mounting Adapter
7	*	PPHMS, M8 - 1.25 x 40
8	96796GS	WASHER
9	67989GS	NUT, M8 Flange Serrated
10	*	HHCS, 5/16-24 x 3/4, SEMS
11	24823GS	HHCS, 5/16-24 x 7-7/8" Lg.
13	66476GS	HHCS, M6 - 1.0 x 12, w/LW
14	191785GS	BRACKET, Muffler
15	697815	GASKET, Exhaust
17	188301GS	MUFFLER
18	*	SHCS, M6 - 1.0 x 20
19	83083GS	SCREEN, Spark Arrest
20	B4986GS	DECAL, Ground
21	194153GS	KIT,Vibration Mount
22	86494GS	SCREW,Wing M6 - 1.0 x 16
23	86292GS	SCREW, 10-16 x 3/4, Self Drill
24	191790GS	SHIELD, Heat
25	191190GS	CAP
26	74908GS	TAPTITE, M5-0.8 x 10 Lg.
31	191436GS	DECAL, Caution Hot Muffler
34	195422GS	COVER, Rear Bearing Carrier
35	195207GS	KIT, Hose Formed
37	B2153GS	HHCS, 12 - 14 x 7/8" Self Driller
40	194398GS	KIT, Fuel Tank Hardware
41	192980GS	KIT,Valve,Tank Fuel Service
44	197553GS	ASSY,Tank, Fuel (Includes Items 41, 50, 51 & 52)
45	B4363GS	GAUGE, Fuel
48	195373GS	WIRE, Ground
50	191437GS	DECAL, Fuel Level
51	197157GS	DECAL,Warning
52	189235GS	DECAL, Operating Instructions
55	191435GS	DECAL, Fuel Shut Off
58	196796GS	ASSY, Control Panel (see page 5)
59	*	NUT, Palnut
900	§	ENGINE

Parts Not Illustrated


196382GS	MANUAL, Owners
43483GS	PLUG, 250V, 20A
MS6737	MANUAL, Engine
197554GS	KIT, Decals Service

* - Items without part numbers are common fasteners and are available at your local hardware store.


§ - Contact Engine Manufacturer

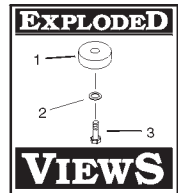


EXPLODED VIEW AND PARTS LIST - ALTERNATOR

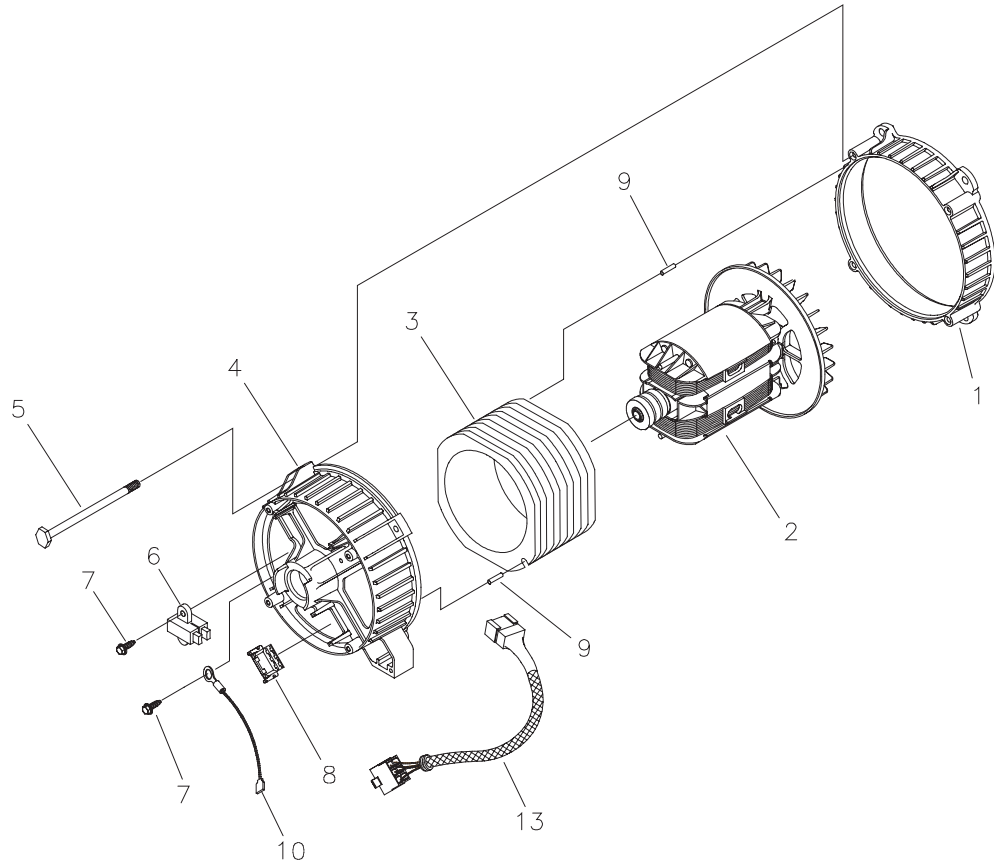

Item	Part #	Description
1	186059GS	ADAPTER, Mounting, Alternator
2	191685GS	ROTOR
3	191686AGS	STATOR
4	186060GS	RBC, with O-Ring (p/n 189197GS)
5	86308GS	HHCS, M6 - 1.0 x 115 SEMS
6	91825GS	ASSEMBLY, Holder, Rectifier/Brush
7	66849GS	TAPTITE, M5 - 0.8 x 16
8	22694GS	RECEPTACLE, 6 pin
9	81917GS	PIN, Roll, 4mm x 10
10	193428AGS	ASSY, Wire, Ground
13	194274GS	HARNESS, Wire, Power

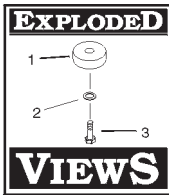

EXPLODED VIEW AND PARTS LIST - CONTROL PANEL

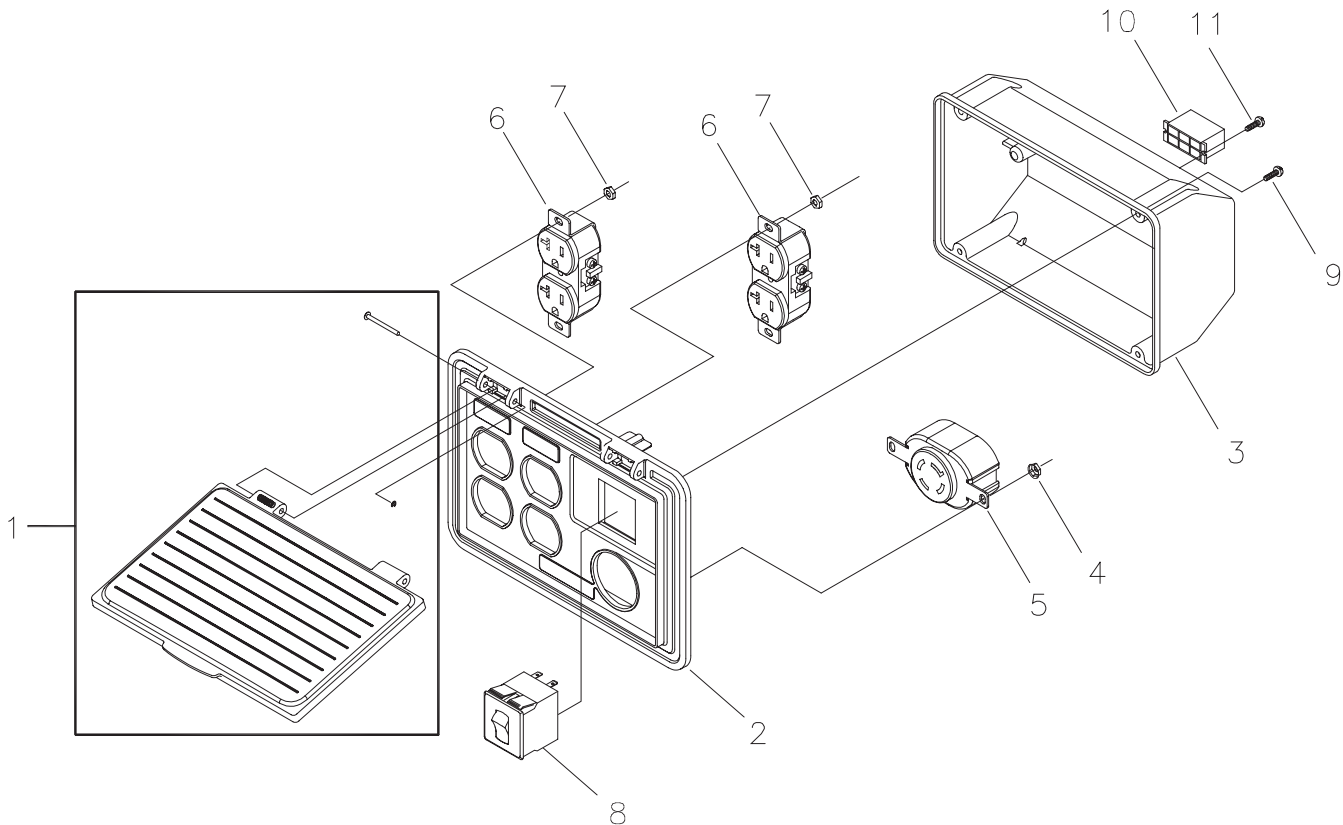

Item	Part #	Description
1	195112GS	ASSY, Control Lid Panel
2	196506CGS	CONTROL PANEL, Compact
3	192274GS	BOX, Rear Cover
4	*	NUT, Palnut, Pushnut, 3/16
5	68867GS	OUTLET, 120/240V Locking, 20A
6	63025GS	OUTLET, 120V, 15A, Duplex
7	*	NUT, Palnut, Pushnut, 5/32
8	191479CGS	BREAKER, 15, 2P
9	192241GS	SCREW, Tapping, 3.5 x 14
10	22694GS	HOUSING, Receptacle
11	82308GS	SCREW, Tapping, STC 3 x 18

* - Items without part numbers are common fasteners and are available at your local hardware store.