



Illustrated Parts List

Model Series

9J900

TYPE NUMBERS
0100, 0111, 0115, 0116,
0292, 0304, 0340, 0341,
0368, 0415, 0526, 0559.

TABLE OF CONTENTS


Air Cleaner	5
Blower Housing/Shrouds	6
Brake	5
Camshaft	3
Carburetor	4
Controls	5
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Cylinder Head	2
Exhaust System	6
Flywheel	6
Fuel Supply	4
Gasket Set - Engine	2
Gasket Set - Valve	2
Governor Spring	5
Ignition	5
Lubrication	2
Piston/Rings/Connecting Rod	3
Rewind Starter	6




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

1058 OPERATOR'S MANUAL

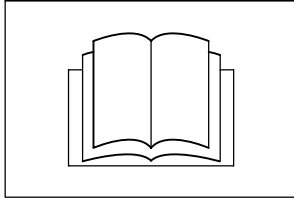

1330 REPAIR MANUAL

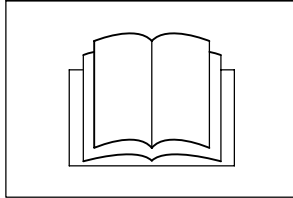


1319 WARNING LABEL






WARNING	
	Read and follow Operating Instructions before running engine.
	Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
	Engines emit carbon monoxide, DO NOT run in enclosed area.
	Muffler area temperature may exceed 150°F. Do not touch hot parts.


REQUIRED when replacing parts with warning labels affixed.



358 ENGINE GASKET SET





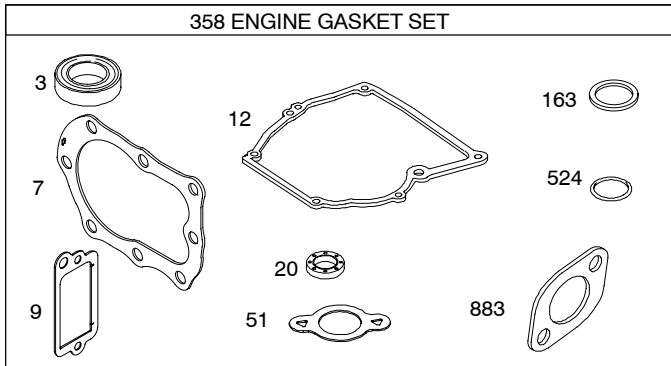


1095 VALVE GASKET SET

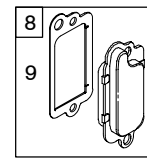
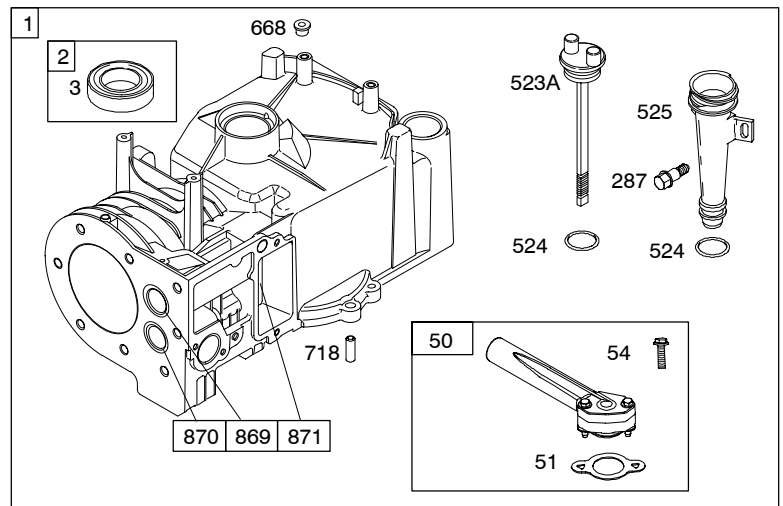
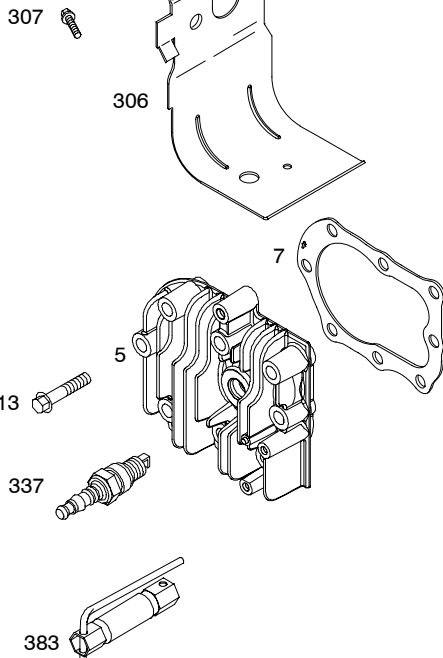
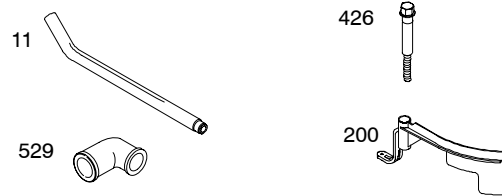
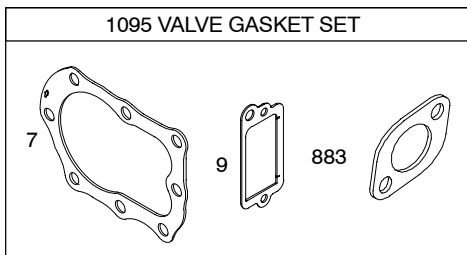


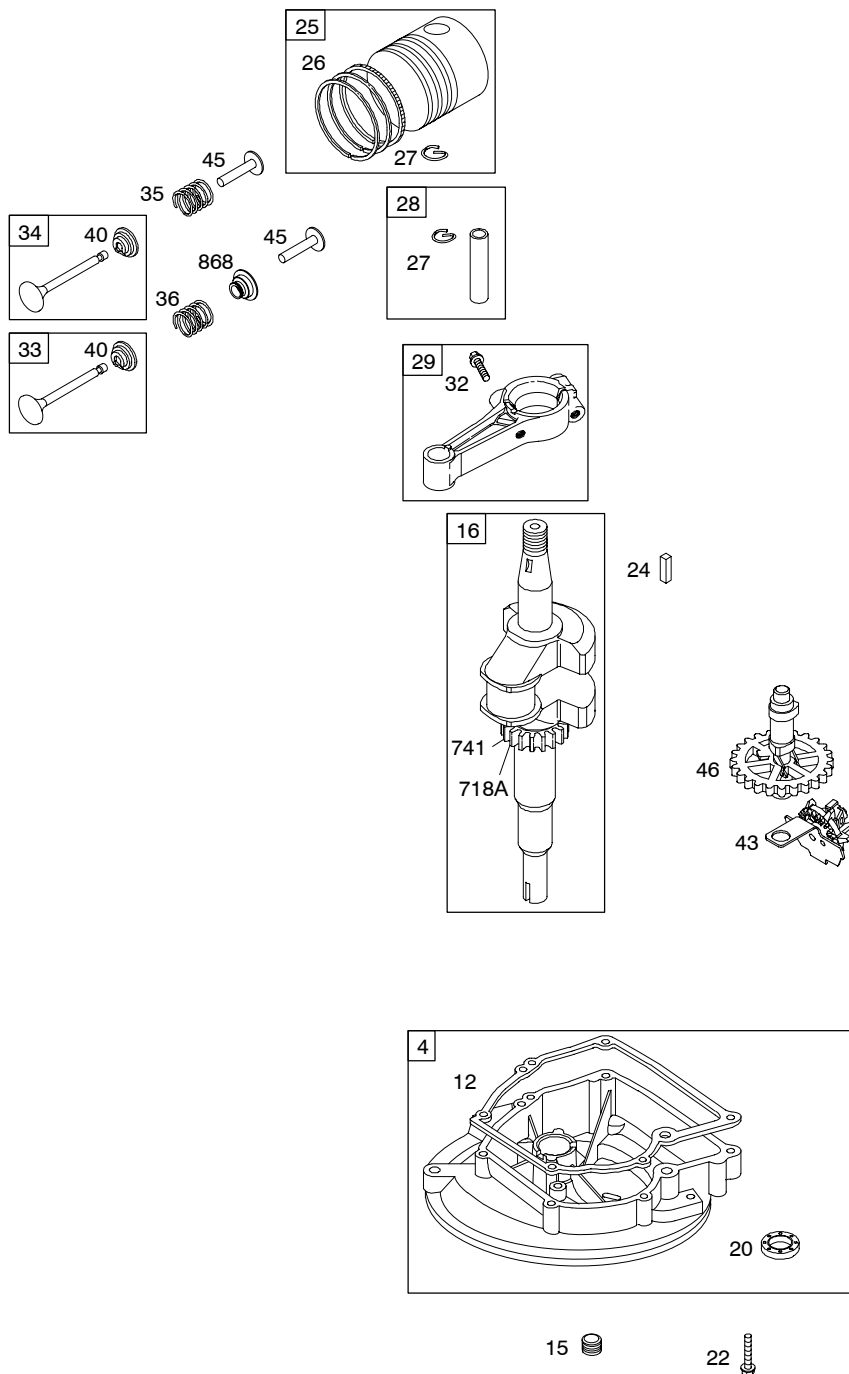

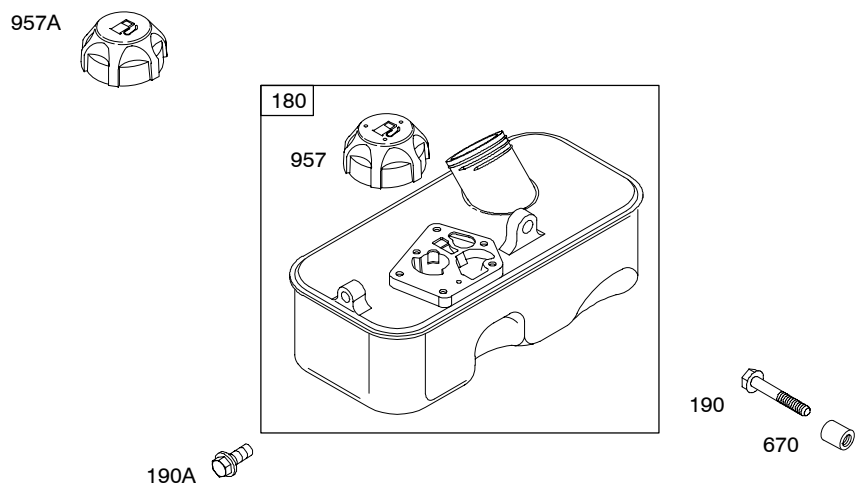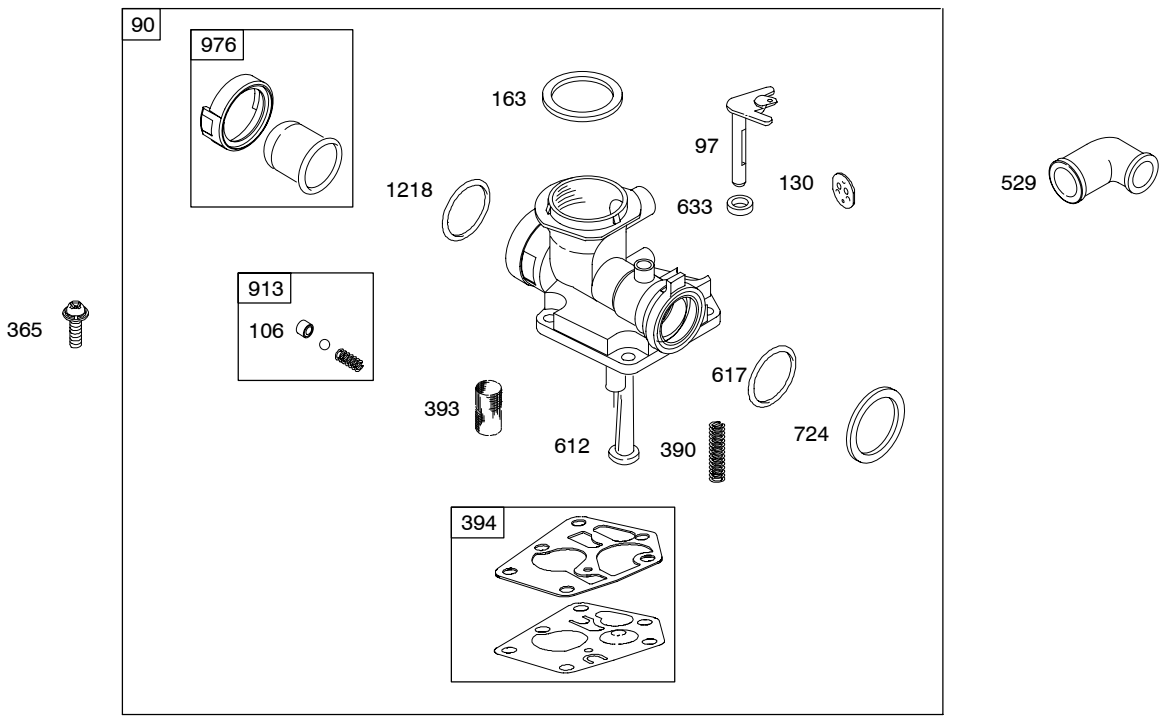

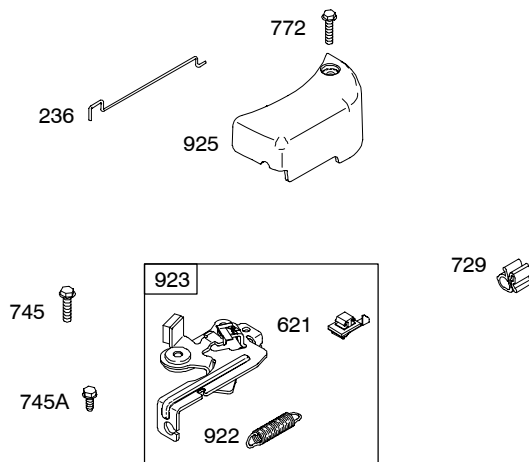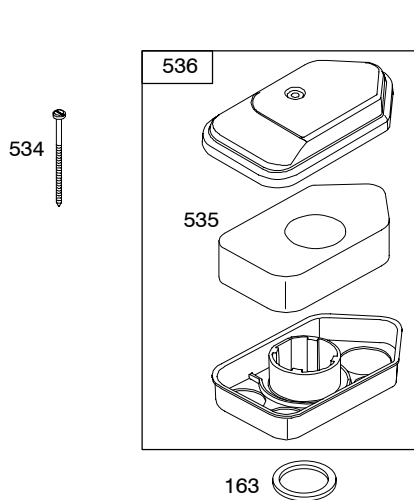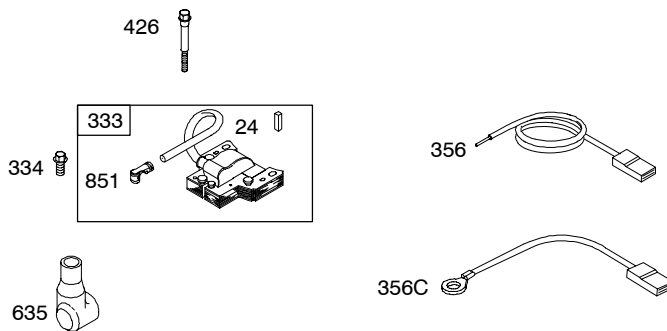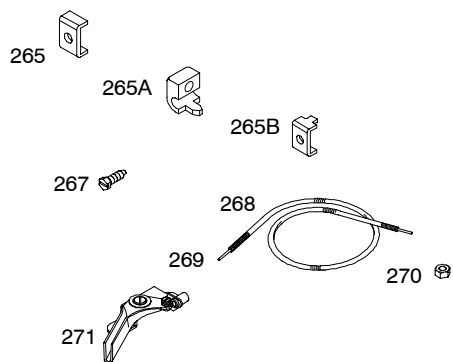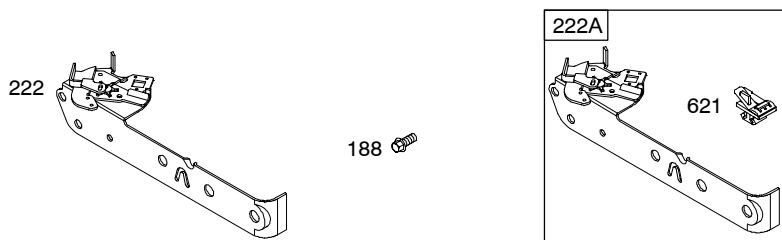

1036 EMISSIONS LABEL

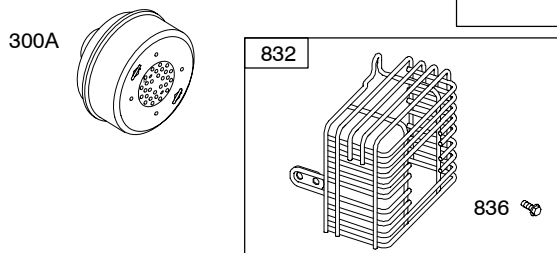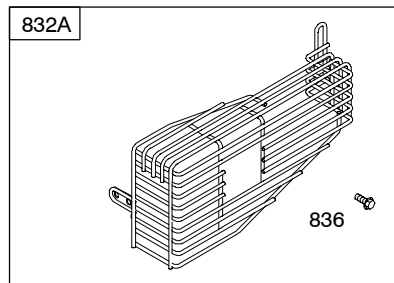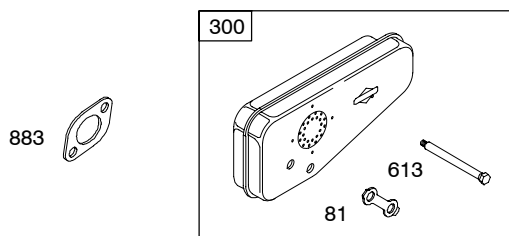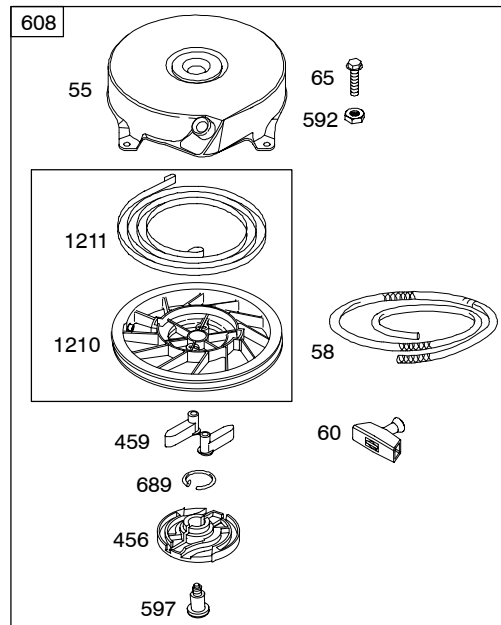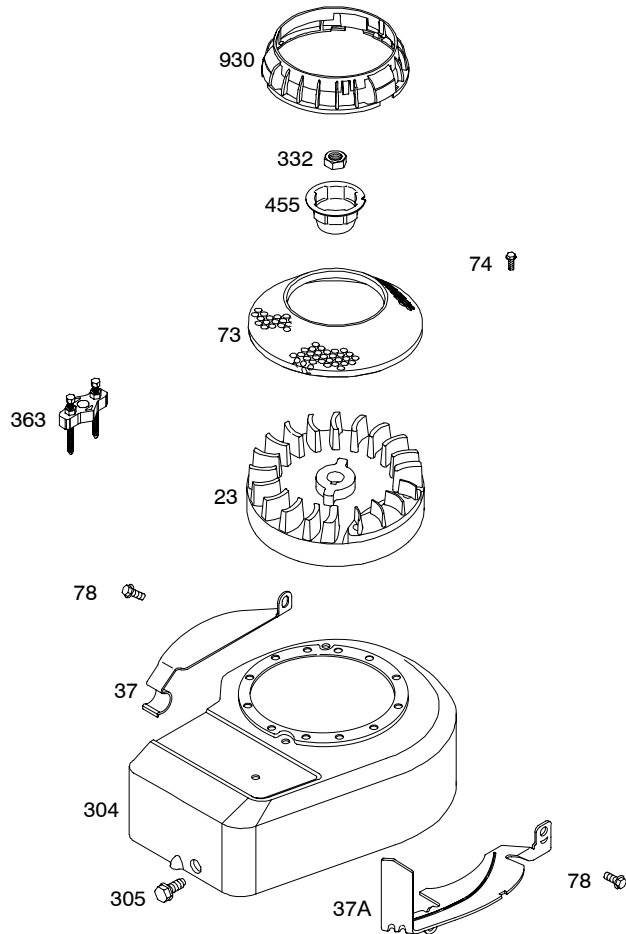

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699653	Cylinder Assembly	24	222698S	Key-Flywheel	37A	691209	Guard-Flywheel (Muffler Side)
2	399269	Kit-Bushing/Seal (Magneto Side)	25	790908	Piston Assembly (Standard) (Used After Code Date 04111400).	40	692194	Retainer-Valve
3	★299819S	Seal-Oil (Magneto Side)			----- Note -----	43	698690	Slinger-Governor/Oil
4	698691	Sump-Engine			699657 Piston Assembly (Standard) (Used After Code Date 030803000 and Before Code Date 04111500).	45	691762	Tappet-Valve
5	790169	Head-Cylinder				46	691998	Camshaft
7	★△698717	Gasket-Cylinder Head				50	699644	Manifold-Intake
8	791781	Breather Assembly (Used After Code Date 05102400).				51	★699649	Gasket-Intake
		----- Note -----				54	691111	Screw (Intake Manifold)
		699640 Breather Assembly (Used Before Code Date 05102500).				55	692144	Housing-Rewind Starter
9	★△695890	Gasket-Breather			792532 Piston Assembly (.020" Oversize) (Used After Code Date 04111400).	58	697316	Rope-Starter (88 5/8" Long) Used on Type No(s). 0100, 0111, 0292, 0304, 0340, 0341, 0368, 0415, 0526, 0559.
10	691666	Screw (Breather Assembly)	26	790909	Ring Set (Standard) (Used After Code Date 04111400).			----- Note -----
11	691245	Tube-Breather			----- Note -----			691921 Rope-Starter (70" Rope) Used on Type No(s). 0115, 0116.
12	★692218	Gasket-Crankcase (.015", Standard)			699658 Ring Set (Standard) (Used After Code Date 030803000 and Before Code Date 04111500).	60	691915	Grip-Starter Rope
13	691640	Screw (Cylinder Head)				65	690837	Screw (Rewind Starter)
15	691680	Plug-Oil Drain			792533 Ring Set (.020" Oversize) (Used After Code Date 04111400).	73	699850	Screen-Rotating
16	692991	Crankshaft Used on Type No(s). 0111, 0292, 0304, 0340, 0341.			498682 Ring Set (.020" Oversize) (Used Before Code Date 04111500).	74	690345	Screw (Rotating Screen)
		----- Note -----				78	692198	Screw (Flywheel Guard)
		492086 Crankshaft Used on Type No(s). 0115, 0415, 0526, 0559.				81	691179	Lock-Muffler Screw
		692990 Crankshaft Used on Type No(s). 0100, 0116, 0368.				90	498811	Carburetor
20	★391483S	Seal-Oil (PTO Side)	27	691588	Lock-Piston Pin	97	691931	Shaft-Throttle
22	692551	Screw (Crankcase Cover/Sump)	28	699659	Pin-Piston	106	691901	Seat-Inlet
23	692009	Flywheel Used on Type No(s). 0100, 0292, 0304, 0341, 0368, 0415, 0526, 0559.	29	699655	Rod-Connecting (Standard)	130	691190	Valve-Throttle
		----- Note -----				163	★271139S	Gasket-Air Cleaner
		690843 Flywheel Used on Type No(s). 0111, 0115, 0116, 0340.	32	691664	Screw (Connecting Rod)	180	494406	Tank-Fuel
			33	296676	Valve-Exhaust	188	692198	Screw (Control Bracket)
			34	296677	Valve-Intake	190	691640	Screw (Fuel Tank) (1 3/4" Long)
			35	690520	Spring-Valve (Intake)	190A	692198	Screw (Fuel Tank) (1/2" Long)
			36	690520	Spring-Valve (Exhaust)	200	691912	Blade-Governor
			37	690482	Guard-Flywheel (Carburetor Side)	201	690347	Link-Air Vane

★ Engine Gasket Set-Reference 358

△ Valve Gasket Set-Reference 1095

9J900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209	691297	Spring-Governor (White) Used on Type No(s). 0100, 0292, 0341, 0368. ----- Note ----- 690251 Spring-Governor (Yellow) Used on Type No(s). 0115, 0116, 0304, 0415, 0526, 0559. 690250 Spring-Governor (Light Green) Used on Type No(s). 0111, 0340.	270	691027	Nut (Control Wire Casing)	337	802592S	Plug-Spark Used on Type No(s). 0100, 0111, 0292, 0340, 0341, 0368, 0526, 0559. ----- Note ----- 697451 Plug-Spark Used on Type No(s). 0115, 0116, 0304, 0415.
211	691859	Spring-Governed Idle	271	691028	Lever-Control	356	692390	Wire-Stop
222	691446	Bracket-Control Used on Type No(s). 0100, 0111, 0292, 0304, 0340, 0341, 0368, 0415, 0526, 0559.	287	691002	Screw (Dipstick Tube)	356C	793399	Wire Assembly Used on Type No(s). 0111, 0340.
222A	691445	Bracket-Control Used on Type No(s). 0115, 0116.	300	692307	Muffler (Super Lo Tone) Used on Type No(s). 0115, 0116, 0304.	358	699933	Gasket Set-Engine
236	691867	Link-Lockout	300A	394569S	Muffler (Round Lo Tone) Used on Type No(s). 0100, 0111, 0292, 0340, 0341, 0368, 0415, 0526, 0559.	363	19069	Puller-Flywheel
265	692179	Clamp-Casing	304	691484	Housing-Blower (Compliance Engines) Used on Type No(s). 0100, 0292, 0304, 0341, 0368, 0415, 0526, 0559. ----- Note ----- 692536 Housing-Blower (Non Compliance Engines) Used on Type No(s). 0111, 0115, 0116, 0340.	365	790029	Screw (Carburetor)
265A	690798	Clamp-Casing Used on Type No(s). 0100.	305	692198	Screw (Blower Housing)	383	89838S	Wrench-Spark Plug
265B	691024	Clamp-Casing Used on Type No(s). 0115, 0116.	306	690400	Shield-Heat	390	691839	Spring-Choke Diaphragm
267	691044	Screw (Casing Clamp)	307	690345	Screw (Heat Shield)	393	691837	Screen-Carburetor
268	691025	Casing-Control Wire (Cut to Required Length)	332	690662	Nut (Flywheel)	394	495770	Diaphragm-Carburetor
269	691026	Wire-Control (Cut to Required Length)	333	793281	Armature-Magneto (Used After Code Date 06073000). ----- Note ----- 496914 Armature-Magneto (Used Before Code Date 06073100).	426	691107	Screw (Governor Blade)
			334	691061	Screw (Magneto Armature)	455	691236	Cup-Flywheel Used on Type No(s). 0100, 0111, 0115, 0116, 0292, 0304, 0340, 0341, 0368, 0415, 0526, 0559.
						456	692299	Plate-Pawl Friction
						459	281505S	Pawl-Ratchet
						523A	691913	Dipstick
						524	★691876	Seal-Dipstick Tube
						525	691320	Tube-Dipstick
						529	692189	Grommet
						534	691417	Screw (Air Cleaner)
						535	698369	Filter-Air Cleaner Foam
						536	698472	Cleaner-Air
						592	690800	Nut (Rewind Starter)
						597	691696	Screw (Pawl Friction Plate)

★ Engine Gasket Set-Reference 358

△ Valve Gasket Set-Reference 1095

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
608	499706	Starter-Rewind (88 5/8" Rope) Used on Type No(s). 0100, 0111, 0292, 0304, 0340, 0341, 0368, 0415, 0526, 0559. ----- Note ----- 690101 Starter- Rewind (70" Rope) Used on Type No(s). 0115, 0116.	832	790744	Guard-Muffler Used on Type No(s). 0415.	883	*Δ 691880	Gasket-Exhaust
612	496046S	Tube-Pick Up	832A	790743	Guard-Muffler Used on Type No(s). 0115, 0116, 0304.	913	494409	Seat-Check Valve
613	691413	Screw (Muffler)	836	790745	Screw (Muffler Guard) Used on Type No(s). 0115, 0116, 0304, 0415.	922	692135	Spring-Brake
617	270344S	Seal-O Ring (Intake Manifold)	851	493880S	Terminal-Spark Plug	923	691487	Brake
621	692310	Switch-Stop	868	697338	Seal-Valve	925	691349	Cover-Linkage
633	691321	Seal-Choke/Throttle Shaft (Throttle)	869	699641	Seat-Valve (Intake) (Used After Code Date 03080300). ----- Note ----- 691701 Seat-Valve (Intake) (Used Before Code Date 03080400).	930	691348	Guard-Rewind Used on Type No(s). 0115, 0116, 0415.
635	66538S	Boot-Spark Plug	870	699642	Seat-Valve (Exhaust) (Used After Code Date 03080300). ----- Note ----- 691702 Seat-Valve (Exhaust) (Used Before Code Date 03080400).	957A	497929S	Cap-Fuel Tank Used on Type No(s). 0100, 0115, 0116E1, 0292, 0304, 0340, 0341, 0368, 0415, 0526, 0559.
668	692889	Spacer (Cylinder)	871	699643	Bushing-Valve Guide (Exhaust Valve) (Used After Code Date 03080300). ----- Note ----- 231348 Bushing-Valve Guide (Exhaust Valve) (Used Before Code Date 03080400). 63709 Bushing-Valve Guide (Intake Valve)	957A	791129	Cap-Fuel Tank Used on Type No(s). 0111, 0116B1.
670	691633	Spacer-Fuel Tank				976	694394	Primer-Carburetor
689	691855	Spring-Friction				1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)
718	690959	Pin-Locating (Cylinder)				1058	277038	Operator's Manual ----- Note ----- MS3447 Operator's Manual Used on Type No(s). 0341, 0368. MS3479 Operator's Manual Used on Type No(s). 0115, 0116.
718A	499047	Pin-Locating (Crankshaft)				1095	498526	Gasket Set-Valve
724	697478	Retainer-Seal				1210	499901	Pulley/Spring Assembly (Pulley)
729	690586	Clip-Wire				1211	499901	Pulley/Spring Assembly (Spring)
741	691805	Gear-Timing				1218	695866	Seal-O Ring (Carburetor)
745	691146	Screw (Brake) (7/8" Long)				1319	794467	Label-Warning
745A	690859	Screw (Brake) (1/2" Long)				1330	270962	Repair Manual
772	691111	Screw (Linkage Cover)						

* Engine Gasket Set-Reference 358

Δ Valve Gasket Set-Reference 1095